


Layers Setup:

- The **Layers** organize different kinds of design information.

How to access the LAYERS Command:


- From the Layers toolbar click on the Layers Properties icon.

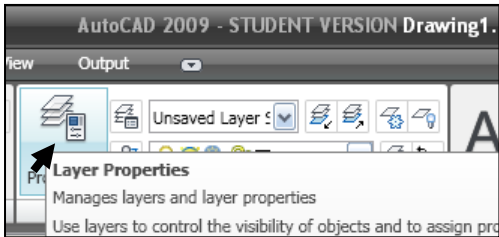


- Click the Menu Browser and select: [Format] → [Layer]
- Typing [Layer] or [LA] in the command prompt area then press → [Enter]

To setup the Layers do the following:


1. Select the **Layer Properties Manager**.

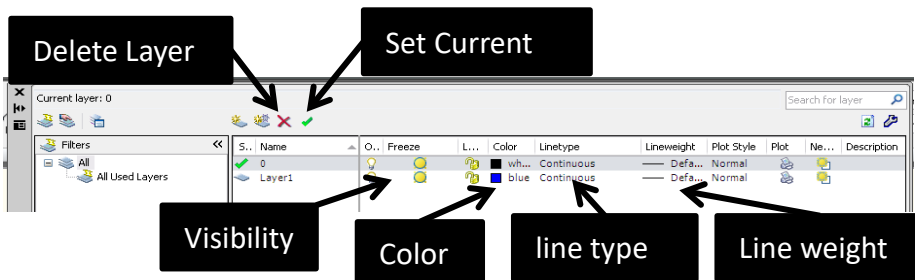




2. Select **[New Layer]** → **[Write the name of layer]**.

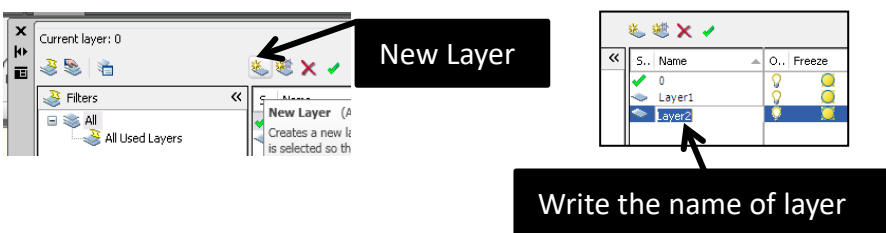



3. Choose the *color* then **[OK]**.

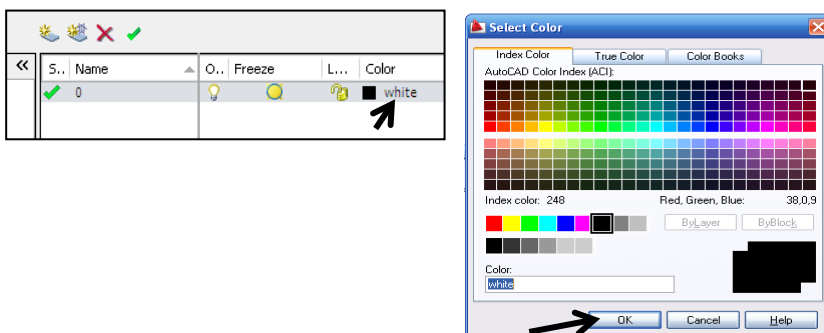


4. Pick line type.

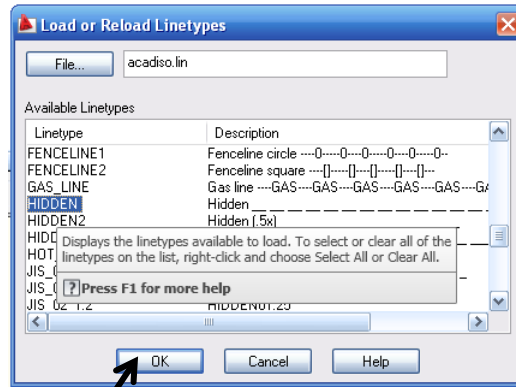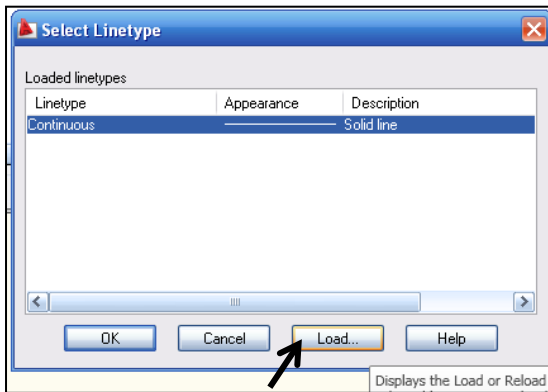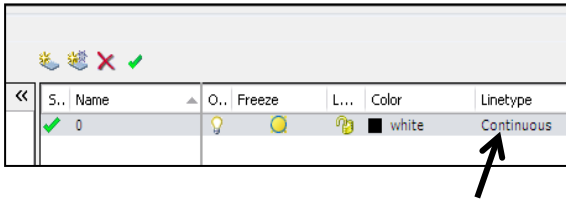

5. Pick line weight.

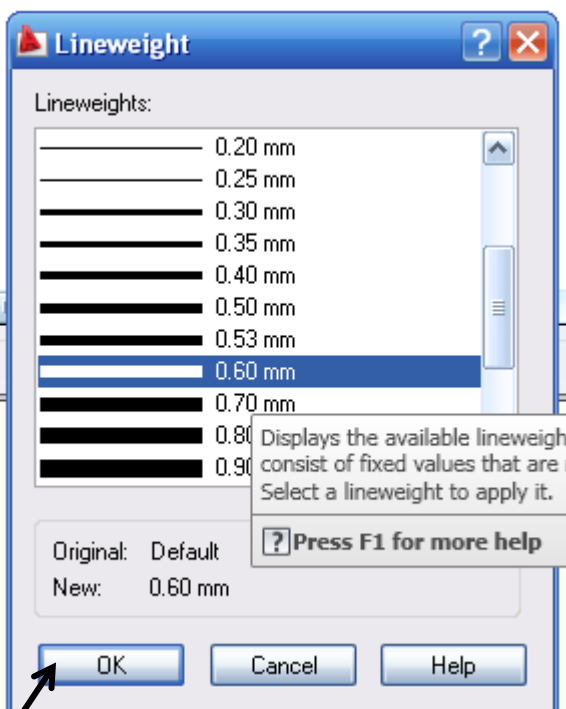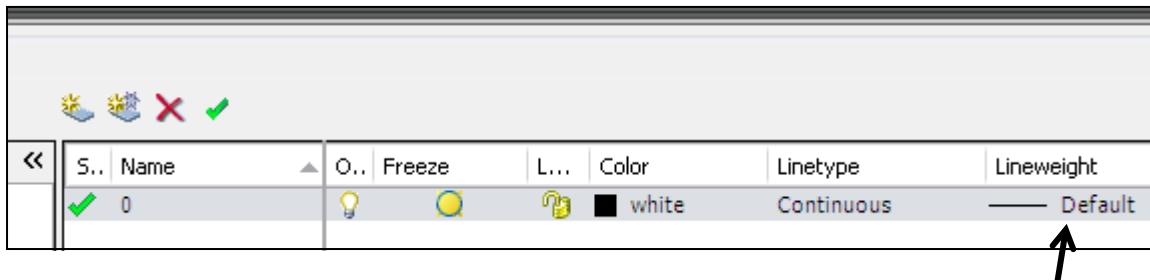

Click on the **Close** button to accept the settings and exit.

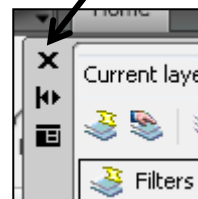



1. Open a new Metric Drawing Create **layers** with the following settings:

<i>Layer</i>	<i>Color</i>	<i>Linetype</i>	<i>Lineweight</i>	<i>Plot Style</i>
▪ Object_Lines	Black	Continuous	0.35mm	Normal
▪ Hidden_Lines	Green	Hidden	0.3mm	Normal
▪ Center_Lines	Cyan	Center	Default	Normal
▪ Dimensions	Red	Continuous	Default	Normal
▪ Title_Text	Blue	Continuous	Default	Normal

2. Create the following title block.

3. Using the **Single Line Text** command write down the title block text with the following settings:

- **Text Type:** Arial
- **Font Style:** Bold
- **Text Height:** 6

4. Save the file as *YOURNAME-TBLOCK*. Make sure the file is saved as AutoCAD Drawing Template (*.dwt)

